


ecosa


Assemble your Rise Storage Bed Frame

1

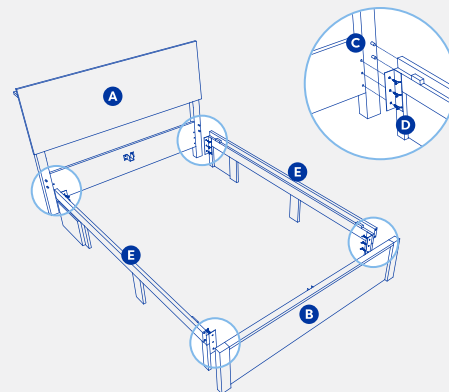


Insert all wooden dowels (C) into the outer holes in the headboard (A) and footboard (B). Connect the sideboards (E) to the dowel pieces, ensuring the end with larger panel connects to the headboard. Loosely screw in all butterfly screws (D) — fully tighten once all screws are in place.

2

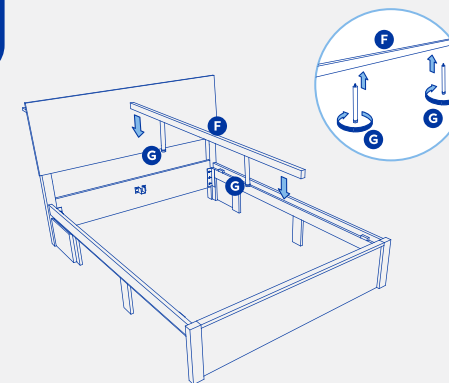

Screw the centre beam legs (G) into the centre beam (F). Adjust the legs by winding the base pads, so it just touches the floor. Don't make it too long or it might break. Place the beam (F) in the holders in the headboard and the footboard.

3

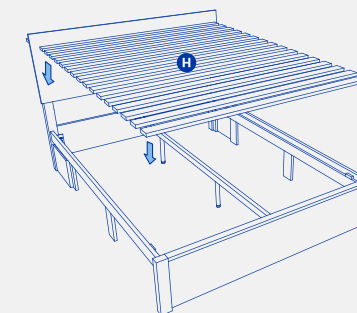


Place the slats (H). Ensure the slat holders sit snug between the last two slats at each end.


What's in the box?

Your bed comes in 5 boxes. First, check all boxes are for the correct bed size, and contain all items as listed.

BOX
1

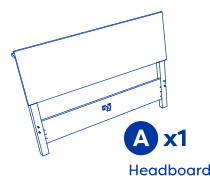

A x1
Headboard

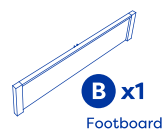

B x1
Footboard



C x8
Wooden Dowels



D x12
Butterfly Screws

BOX
2



E x2
Sideboards




F x1
Centre Beam



G x2
Centre Beam Legs

BOX
3

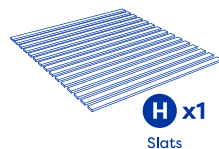

H x1
Slats

BOX
4

x2



I x4
Drawer Front Panels



J x8
Drawer Side Panels



K x8
Drawer Screws




L x4
Drawer Back Panel




M x4
Drawer Base

4

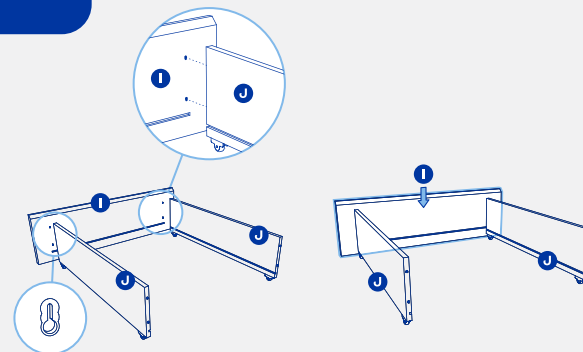


To connect the drawer side panels (J) to the front panel (I), insert the metal screws in the ends into the large part of the holes in the front panel. Push the front panel down so the metal screws secure into the smaller part of the holes (and grooves in the wood align).

5

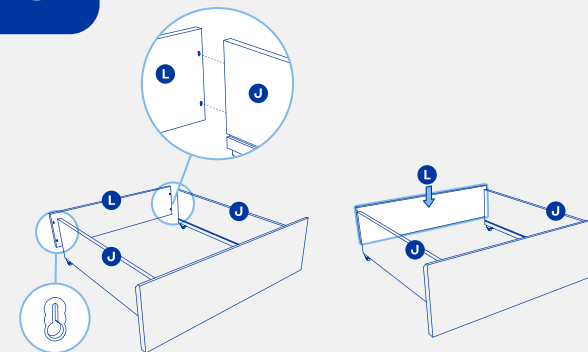


To connect the drawer back panel (L), insert the metal screws in the end of the side panels (J) into the large part of the holes in the back panel. Push the back panel down so the metal screws secure into the smaller part of the holes.

6

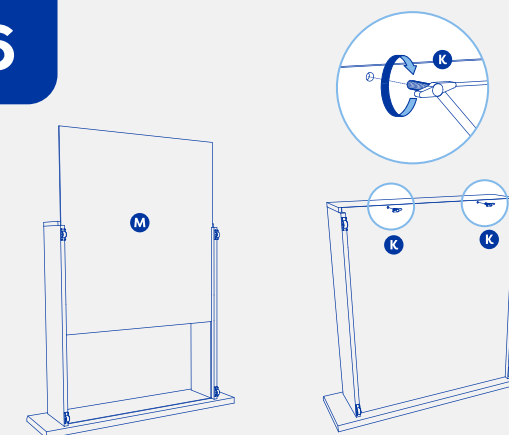

Slide in the drawer base (M). Secure with the drawer screws (K). Now repeat steps 4-6 for the remaining drawers.

7

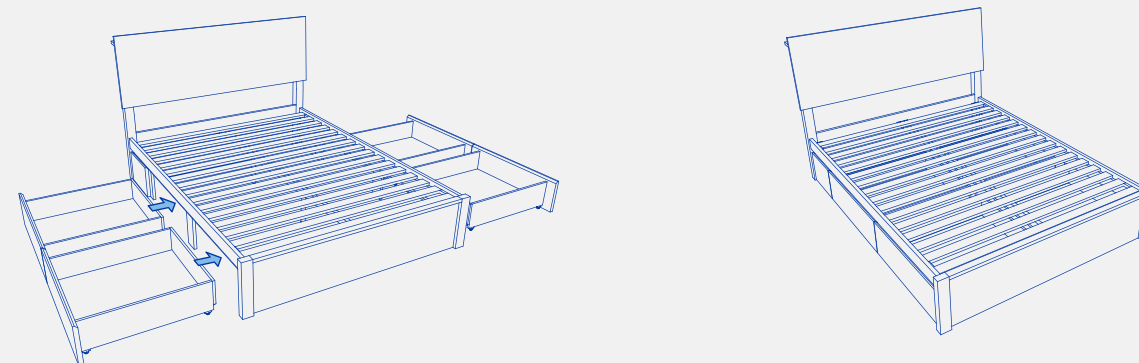

Push the drawers under the bed — and you're ready to sleep and store in style.